

The cycle will end automatically after the spin cycle, unless NO FINAL SPIN has been selected. If NO FINAL SPIN was selected, refer to page 12 for information on how to end the cycle and enable opening of the door.

To use these settings for starching:

1. Place the washing to be starched into the washer. The washing should not have been treated with fabric softener.
2. Dissolve sufficient starch for 4 gallons (15 litres) of water (being sure to observe the starch manufacturer's instructions) in a quart (1 litre) of water.
3. Depress the "ON/OFF" button.
4. Set the cycle selector to RINSE/SPIN (11) or SOFT RINSE/SPIN (10).
5. Set the spin speed selector to a specific speed, or INTERVAL SPIN, or NO FINAL SPIN.
6. Depress the "START" button. The indicator light for "Rinse/Spin" in the cycle progress indicator will become illuminated and the time of the cycle will appear in the "Cycle Countdown" alphanumeric display.
7. When the water begins to flow into the washer, pull out the dispenser drawer slightly and pour the starch solution into the prewash compartment (compartment marked "P" on the right).
8. Close the dispenser drawer. The cycle will end automatically after the spin cycle, unless NO FINAL SPIN has been selected. If NO FINAL SPIN was selected, refer to page 12 for information on how to end the cycle and enable opening of the door.

Soft Spin (8) & Spin (9)

These setting selections are used to spin individual items of laundry. The SOFT SPIN (8) is performed at a lower speed for permanent press and delicate items. Maximum spin speeds of different cycles and for INTERVAL SPIN setting are shown in Table 3, page 11.

7. Soak

The Soak setting is used to pre-treat heavily stained items:

1. Only items of the same color should be soaked in a single load.
2. Pour the soaking agent into Prewash compartment (compartment "P", on the right).
3. Depress the "ON/OFF" button.
4. Set the cycle selector to 7 SOAK.
5. Depress the "START" button. The indicator light for Washing in the cycle progress indicator will become illuminated.

The Soak cycle lasts 2 hours. All the water is pumped out, without a spin. The clothes remain wet. A rinse cycle can be selected to remove the soak water from the wash. You may, as well, without soaked clothes being rinsed first, select desired wash cycle.

6 Drain

The DRAIN setting is used to pump water out of the washer, without spinning, for example after the NO FINAL SPIN selection has ended the cycle.

 


Figure 17.

File Name: bosch wfk 6030 manual.pdf

Size: 1591 KB

Type: PDF, ePub, eBook

Category: Book

Uploaded: 20 May 2019, 12:55 PM

Rating: 4.6/5 from 723 votes.

Status: AVAILABLE

Last checked: 10 Minutes ago!

In order to read or download bosch wfk 6030 manual ebook, you need to create a FREE account.

[**Download Now!**](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with bosch wfk 6030 manual . To get started finding bosch wfk 6030 manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



Book Descriptions:

bosch wfk 6030 manual

Were committed to dealing with such abuse according to the laws in your country of residence. When you submit a report, well investigate it and take the appropriate action. Well get back to you only if we require additional details or have more information to share. Note that email addresses and full names are not considered private information. Please mention this; Therefore, avoid filling in personal details. The manual is 2,72 mb in size. If you have not received an email, then probably have entered the wrong email address or your mailbox is too full. In addition, it may be that your ISP may have a maximum size for emails to receive. Check your email Please enter your email address. Thanks for you help.Login to post But I dont have manual. So I dont know how to use it. Can someone tell me what model or know where to get manual from. Thanks in advance. Hope that helps, just start messing withit you cant break anythingI cleared error e 0006020102 but not stil operate machine This could signify a faulty motor, motor controller, or thermal protector, or there could be a mechanical bind in the transmission.Hope this helpsBut I dont have manual. So I dont know how to use it. Can someone tell me what model or know where to get manual from. Thanks in advance. After that the WFK 2831 stopped and there are no lights indication in the front panel other than the main power button. Answer questions, earn points and help others. Bed chain gearbox Tomahawk 1005 and 1010 models. 8. Used on all Tomahawk models with gearboxes made from December 2012. West 8010 Series Indicators. Replacement 8010 Plus. Survivor 16 Knife Fixed Blade brown Hunter Wood combat sword Jungle Bowie 6010.Reload to refresh your session. Reload to refresh your session.<http://hanyangsteel.com/files/fckeditor/11993796175f586a3238cd0.xml>

- **bosch wfk 6030 manual, bosch wfk 6030 manual, bosch wfk 6030 manual pdf, bosch wfk 6030 manual download, bosch wfk 6030 manual instructions, bosch wfk 6030 manual user.**

<http://www.eggo-ural.ru/uploads/compton-manual-of-field-geology.xml>

<https://congviendisau.vn/vi/3gm30-manual>

<http://guesthouseczestochowa.com/images/canon-timer-remote-controller-manual.pdf>

<https://abcdedektor.com/images/canon-t90-repair-manual.pdf>

www.kidnuri.com/wp-content/plugins/formcraft/file-upload/server/content/files/1626c7f410d076---communication-systems-engineering-proakis-solutions-manual.pdf

<https://www.thebiketube.com/acros-3g3rx-manual>