

## brother hl-5170dn laser printer manual

---



**File Name:** brother hl-5170dn laser printer manual.pdf

**Size:** 3227 KB

**Type:** PDF, ePub, eBook

**Category:** Book

**Uploaded:** 24 May 2019, 16:31 PM

**Rating:** 4.6/5 from 697 votes.

**Status:** AVAILABLE

Last checked: 4 Minutes ago!

**In order to read or download brother hl-5170dn laser printer manual ebook, you need to create a FREE account.**

[\*\*Download Now!\*\*](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

### Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with brother hl-5170dn laser printer manual . To get started finding brother hl-5170dn laser printer manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



## Book Descriptions:

# brother hl-5170dn laser printer manual

Doing this might cause an electrical shock. After you have just used the printer, some internal parts of the printer are extremely hot. When you open the front or back covers of the printer, never touch the shaded parts shown in the illustration. Changes or modifications not expressly approved by Brother Industries, Ltd. Brother Buji Nan Ling Factory Gold Garden Ind., Nan Ling Village, Buji, Rong Gang, Shenzhen, CHINA This product complies with FDA radiation performance standards, 21. Save all packing materials and the printer carton. The interface cable is not a standard accessory. Please purchase the appropriate interface cable for the interface you intend to use Parallel, USB or Network. From the Start button, select Programs, your printer Brother HL5170DN, and User's Guide. If you do not want to install the User's Guide, select Custom Installation from Install Software, and deselect User's Guide when you install the driver. The opening screen will appear automatically. Select your printer model and the language. Click the Initial Setup icon on the menu screen. You can view the initial setup instructions and follow the steps on pages 8 to 10. Drum unit assembly Protective part Rock it from side to side several times to distribute the toner evenly inside the assembly. Put the drum unit assembly into the printer. Close the front cover of the printer. Check that the paper is flat in the tray and below the maximum paper mark. Up to here. Put the paper tray firmly back in the printer. Go to the next page. You will be prompted to connect the interface cable during the driver installation. Make sure that the printer power switch is off. Connect the AC power cord to the printer. Plug the AC power cord into an AC outlet. Go to page 16 Brother Peer to Peer Network Printer Users NetBIOS. Go to page 16 Network Shared Printer Users. Go to page 18. Make sure the USB interface cable is NOT connected to the printer, and then begin installing the driver. <http://www.sanitconsulting.it/public/userfiles/cygwin-terminal-manual.xml>

- **brother hl-5170dn laser printer manual, brother hl-5170dn laser printer manual download, brother hl-5170dn laser printer manual free, brother hl-5170dn laser printer manual pdf, brother hl-5170dn laser printer manual 2017.**

Select the Brother HL5170DN series icon. From the File menu, select Set as Default printer. The setup is now complete. Select the Parallel interface. Turn off the printer power switch. Click the Install button. Click the Next button. Follow the onscreen instructions. Click the Finish button. If you want to register your product online, check the "OnLine Registration" box. The Setup is now complete. Before installation, if you are using Personal Firewall software e.g. the Internet Connection Firewall available in Windows XP, disable it. Follow the onscreen instructions. Select Brother Peer to Peer Network Printer, and then click the Next button. For LPR Users Select Search the network for devices and choose from a list of discovered devices Recommended. Or enter your printers IP address or its node name. Follow the onscreen instructions. Select Network Shared Printer, and then click the Next button. Select your printers queue, and then click the OK button. Contact your administrator if you are not sure about the printers queue. Open the MAC OS 9 folder. Doubleclick the PPD Installer ENG icon to install the printer driver. Click the Create. button. Enter the name HL5170DN series for your printer, and then click the Save button. From the File menu, select Quit. Continue to the next page. From the Printing menu, select Set Default Printer. The setup is now complete. Open the Print Center icon. Click the Add Printer. button. Select USB. Select HL5170DN series, and then click the Add button. From the Print Center menu, select Quit Print Center. The setup is now complete. Connect the network interface cable to the printer, and then connect it to a free port on your hub. This software is Web server based and requires the installation of Microsofts IIS Internet Information Server and Sun's Java client software. Print the Printer

Settings Page The Printer Settings Page lists all the current printer settings, including network settings. <http://www.cajou.be/userfiles/cygwin-user-manual.xml>

To print the Printer Settings Page, press the Go button three times. Doubleclick the new device. Brother reserves the right to make changes without notice in the specifications and materials contained herein and shall not be responsible for any damages including consequential caused by reliance on the materials presented, including but not limited to typographical and other errors relating to the publication. For more information about the consumables for your printer, visit or contact your local Brother reseller. Users Guide Chapter 5. We have 10 Brother HL5170DN manuals available for free PDF download Technical Reference Manual, Service Manual, User Manual, Network Users Manual, Quick Setup Manual, Parts Reference List. Please check your inbox, and if you can't find it, check your spam folder to make sure it didnt end up there. Please also check your spam folder. Please use the Quick Setup Guide to set up the printer. You can find a printed copy in the box. Please read this User's Guide thoroughly before you use the printer. Keep the CDROM in a convenient place so you can use it quickly if you need to. Please visit our web site at where you can get answers to Frequently Asked Questions FAQs, Product Support and Technical Questions, and the latest Driver Updates and Utilities. Were committed to dealing with such abuse according to the laws in your country of residence. When you submit a report, well investigate it and take the appropriate action. Well get back to you only if we require additional details or have more information to share. Note that email addresses and full names are not considered private information. Please mention this; Therefore, avoid filling in personal details. The manual is 3 mb in size. If you have not received an email, then probably have entered the wrong email address or your mailbox is too full. In addition, it may be that your ISP may have a maximum size for emails to receive. Check your email Please enter your email address.

Order a driver CD containing all of these installation files or buy highspeed priority download access. This page was last reviewed on June 16, 2013 to ensure all drivers are uptodate. A window should then show up asking you where you would like to save the file. Save the driver file somewhere Then follow the instructions below corresponding to the file type that you Then simply follow the onscreen instructions for installing the driver. Comments soliciting business, relating to illegal activities or containing slanderous or defamatory language will be removed. I want I could write just like you. Very good stuff. Is gonna be again steadily to investigate crosscheck new posts I have no idea if here is the best destination for a ask but would you guys have any idea where you'll get some expert writers Thanks Browse all Brother Printer Drivers Browse all Brother Devices Browse all Printer Manufacturers Browse our entire collection. Total Pages in Manual 143. We have the user manual for this product. Select how to get it below. Reload to refresh your session. Reload to refresh your session. Select how to get it below. Toshiba 50a60 technical manual, Alpine auto manual, Aging gratefully guide naomis, Html get form, Who report on worldwide violence. Reload to refresh your session. Reload to refresh your session. Interface cable Front view Back view Positioning the printer Power supply Environment What kind of paper can I use. Please use the Quick Setup Guide to set up the printer. Please visit our web site at where you can get answers to Frequently Asked Questions FAQs, Product Support and Technical Questions, and the latest Driver Updates and Utilities. Remember these useful tips when you use the printer. Cleaning with volatile liquids such as thinner or benzene will damage the surface of the printer. Do not use cleaning materials that contain ammonia. They will damage the printer and the toner cartridge.

<http://superbia.lgbt/flotaganis/1649567006>

After you have just used the printer, some parts inside the printer will be extremely hot. When you open the front or back cover of the printer, never touch the shaded parts shown in the illustrations below. There are high voltage electrodes inside the printer. Before you clean the printer, clear a paper jam or replace parts, make sure you have turned off the power switch and unplugged

the printer from the AC power outlet. Do not handle the plug with wet hands it might give you an electrical shock. Epson is a registered trademark and FX80 and FX850 are trademarks of Seiko Epson Corporation. Hewlett Packard is a registered trademark and HP LaserJet 6P, 6L, 5P, 5L, 4, 4L 4P, III, IIP, II, and IIP are trademarks of Hewlett-Packard Company. IBM, IBM PC, and Proprinter are registered trademarks of International Business Machines Corporation. ENERGY STAR is a U.S. registered mark. All other terms and brand and product names mentioned in this User's Guide are registered trademarks of their respective companies. Compilation and Publication Notice Under the supervision of Brother Industries Ltd., this manual has been compiled and published, covering the latest product's descriptions and specifications. The contents of this manual and the specifications of this product are subject to change without notice. We recommend that you save and use the original packaging. The Printer should also be adequately insured with the carrier. When you unpack the printer, check to see that you have all of the following parts. 1 Printer 2 Drum unit and toner cartridge assembly 3 Quick Setup Guide 4 CDROM 5 AC power cord Components may differ from one country to another. About this printer The power cord may be slightly different than the one in the figure above, depending on which country the printer was bought in. 1 2 3 4 5 Power supply Use the printer within the recommended power range.

<http://percoraires.com/images/concord-ceiling-fans-manual.pdf>

If you cannot avoid using the printer with these appliances, we recommend that you use a voltage transformer or a high frequency noise filter. Use a voltage regulator if the power source is not stable. Type and size of paper The printer loads paper from the installed paper tray, manual feed tray or optional lower tray unit. The names for the paper trays in the printer driver and this Guide are as follows While looking at this page on the CDROM, you can jump to the page for each printing method by clicking L in the table. For the paper you want to use, see What kind of paper can I use. Media Type Plain Paper Paper Source Tray 1 PCL driver PS driver For HL5150D and HL5170DN Illustrations in this section are based on HL5150D and HL5170DN. Figure 15 3 While pressing the blue paper guide release lever, slide the paper guides to fit the paper size. Check that the guides are firmly in the slots. Figure 16 Check that the paper is flat in the tray at all four corners. Figure 17 5 Put the paper tray firmly back in the printer. Figure 1 8 When you use preprinted paper, put the side that is going to be printed on blank side face down, with the top of the paper at the front of the tray. Pull up the output tray support flap to prevent paper from sliding off the facedown output tray. Figure 1 9 If you choose not to pull out the output tray support flap, we recommend that you remove printed pages immediately after they come out of the printer. Media Type Plain Paper Paper Source Manual PCL driver 2 Send the print data to the printer. The printer automatically turns on the Manual Feed mode when you put paper in the manual feed tray. A NO PAPER message is shown in the Status Monitor and indicated by the control panel LEDs until you put a sheet of paper in the manual feed tray. Figure 110 Toner Drum Paper Status Slide the paper guides to fit the paper size.

<https://mugtama.com/images/concord-crib-manual.pdf>

Figure 1 11 4 Using both hands put paper in the manual feed tray until the front edge of the paper touches the paper feed roller. Hold the paper in this position until the printer automatically feeds the paper in for a short distance, and then let go of the paper. Figure 1 12 5 After the printed page comes out of the printer, put in the next sheet of paper as in Step 4 above. Media Type Plain Paper Paper Source MP Tray PCL driver PS driver The printer automatically turns on the MP Tray mode when you put paper in the multipurpose tray. Figure 1 13 3 Pull out the MP tray support flap. Figure 1 14 4 When putting paper in the MP tray, make sure it touches the back of the tray and remains under the maximum paper height guides on both sides of the tray. Figure 1 15 Make sure that the paper is straight and in the proper position on the MP tray. If it is not, the paper may not be fed properly, resulting in a skewed printout or a paper jam. MP tray support flap Figure 1 16 6

Send the print data to the printer. When you select the paper you want to use, see What kind of paper can I use. Media Type Thick paper or Thicker paper Paper Source Manual PCL driver 2 Open the faceup output tray. Figure 1 17 Slide the paper guides to fit the paper size. Figure 1 19 5 Using both hands put the paper in the manual feed tray until the front edge of the paper touches the paper feed roller. Figure 1 20 A NO PAPER status is shown by the control panel LEDs until you put a sheet of paper in the manual feed tray. Figure 1 18 Toner Drum Paper Status Repeat for each page that you want to print. 7 Close the faceup output tray. Caution Remove each sheet immediately after printing. Stacking the sheets may cause a paper jam or the paper to curl. Media Type Thick paper or Thicker paper Paper Source MP Tray PCL driver PS driver Figure 1 23 4 Pull out the MP tray support flap.

Figure 1 24 MP tray support flap Figure 1 25 6 While pressing the paper guide release lever, slide the paper guide to fit the paper size. Figure 1 26 7 Send the print data to the printer. 8 Close the faceup output tray. Make sure that the paper is straight and in the proper position in the MP tray. If it is not, the paper may not be fed properly, resulting in a skewed printout or a paper jam. Stacking the sheets may cause a paper jam or the paper to curl. Figure 1 27 However, some envelopes will have feed and print quality problems because of the way they have been made. A suitable envelope should have edges with straight, wellcreased folds and the leading edge should not be thicker than two pieces of paper. The envelope should lie flat and not be of baggy or flimsy construction. You should buy quality envelopes from a supplier who understands that you will be using the envelopes in a laser printer. You are responsible for the quality and performance of the envelopes you use. Media Type Envelopes Paper Source Manual PCL driver 2 Open the faceup output tray. Figure 1 29 The printer automatically turns on the Manual Feed mode when you put paper in the manual feed tray. Slide the paper guides to fit the envelope size. Figure 1 31 A NO PAPER status is shown by the control panel LEDs until you put a sheet of paper in the manual feed tray. Figure 1 30 Toner Drum Paper Status Hold the envelope in this position until the printer automatically feeds it in for a short distance, and then let go of the envelope. Figure 1 33 Envelopes that have been creased after they have been printed At the back of the printer, open the faceup output tray and push down the blue tabs at the left and right hand sides as shown in the figure below. When you have finished printing your envelopes, close the faceup output tray to reset the two blue tabs back to their original position.

[www.shipsupply.co.mz/wp-content/plugins/formcraft/file-upload/server/content/files/16273ad7001a9f---british-army-first-aid-manual.pdf](http://www.shipsupply.co.mz/wp-content/plugins/formcraft/file-upload/server/content/files/16273ad7001a9f---british-army-first-aid-manual.pdf)

Figure 1 32 Media Type Envelopes Paper Source MP Tray PCL driver PS driver The printer automatically turns on the MP Tray mode when you put paper in the MP tray. Figure 1 35 4 Pull out the MP tray support flap. Figure 1 36 MP tray support flap Do not put more than 3 envelopes in the MP tray at any one time, or it may cause a jam. Figure 1 38 Envelopes that have been creased after they have been printed At the back of the printer, open the faceup output tray and push down the blue tabs at the left and right hand sides as shown in the figure below. Figure 1 37 Make sure that the envelopes are neatly stacked and in the proper position in the MP tray. If they are not, the envelopes may not be fed properly, resulting in a skewed printout or a jam. Figure 1 39 7 Send the print data to the printer. 8 After you finish the print job, close the faceup output tray. Put a new DL size double flap envelope in the MP tray with the longest edge of the envelope in first, then print again. Figure 1 40 3 While pressing the blue paper guide release levers, slide the paper guides to fit the transparency size. Check that the guides are firmly in the slots. Figure 1 41 4 Put transparencies in the tray. Do not put more than 10 transparencies in the tray at any one time, or it may cause a jam. Figure 1 42 Figure 1 44 Caution Remove each transparency immediately. Pull out the support flap to prevent transparencies from sliding off the facedown output tray. Figure 1 43 Media Type Transparencies Paper Source Manual PCL driver 2 Open the faceup output tray. Figure

1 45 Slide the paper guides to the transparency size. Figure 1 47 5 Using both hands put the transparency in the manual feed tray until its front edge touches the paper feed roller. Hold the transparency in this position until the printer automatically feeds it in for a short distance, and then let go of the transparency.

Figure 1 48 A NO PAPER status is shown by the control panel LEDs until you put a transparency in the manual feed tray. Figure 146 Toner Drum Paper Status Repeat for each transparency that you want to print. 7 After you finish the print job, close the faceup output tray. Caution Remove each transparency immediately after printing. Media Type Transparencies Paper Source MP Tray PCL driver PS driver Figure 1 49 3 Send the print data to the printer. 4 Open the MP tray and lower it gently. Figure 1 51 A NO PAPER status is shown by the control panel LEDs until you put a transparency in the MP tray. Figure 150 Toner Drum Paper Status Figure 1 52 6 When putting transparencies in the MP tray, make sure they touch the back of the tray and remain under the maximum paper height guides on both sides of the tray. Do not put more than 10 transparencies in the MP tray at any one time, or it may cause a jam. Figure 1 53 7 While pressing the paper guide release lever, slide the paper guide to fit the transparency size. Figure 1 54 Make sure that the transparencies are straight and in the proper position in the MP tray. If they are not, the transparencies may not be fed properly, resulting in a skewed printout or a jam. Caution Remove each transparency immediately after printing. Stacking the printed transparencies may cause a paper jam or the transparency to curl. Remove the paper and straighten it. Printing on both sides of the paper manual duplex printing Manual duplex printing from the paper tray 1 Choose the Manual Duplex printing mode you need from the Advanced tab, and from the Basic tab select the Paper Source to be Tray1. 2 The printer will automatically print all the evennumbered pages on one side of the paper first. 3 Remove the printed evennumbered pages from the output tray and put them back in the paper tray, placing the paper with the side to be printed on blank side face down.

Follow the instructions on the computer screen. Figure 1 55 4 The printer will now automatically print all the odd numbered pages on the other side of the paper. The PS driver does not support manual duplex printing. If you select the Paper Source to be Auto Select in Step 1 using HL5150D or HL5170DN, please put the printed even numbered pages in the MP tray. When you put paper in the paper tray, first empty the tray then put the printed page in it, with the printed side face up. Do not add the printed pages to the top of the stack of unprinted paper. Follow the instructions on the computer screen. Repeat this step until you have printed all the evennumbered pages. Figure 1 56 3 Remove the printed evennumbered pages from the output tray and put them in the same order back into the manual feed tray. Place the paper with the side that is going to be printed on the blank side face up. Follow the instructions on the computer screen. Figure 1 57 4 Repeat Step 3 until you have printed all the oddnumbered pages on the other side of the paper. If you select the Paper Source to be Auto Select in Step 1, please put the printed even numbered pages in the paper tray. Follow the instructions on the computer screen. Repeat this step until you have printed all the evennumbered pages. Figure 1 58 3 Remove the printed evennumbered pages from the output tray and put them in the same order back into the MP tray. Place the paper with the side that is going to be printed on the blank side face up. Follow the instructions on the computer screen. Figure 1 59 4 Repeat Step 3 until you have printed all the oddnumbered pages on the other side of the paper. If you print 10 pages on 5 sheets of paper, it will print page 2 then page 1 on the first sheet of paper. It will print page 4 then page 3 on the second sheet of paper. It will print page 6 then page 5 on the third sheet of paper, and so on.

To print the second side, put the paper face up, with the leading edge top of the paper at the front of the tray. If letterhead paper is used, this would be put in the paper tray with the heading face up, and at the front of the tray. To print the second page, put the heading face down and at the front of the tray. For Thicker paper that has curled once the first side has been printed on, and you

cannot feed the paper for the second time from manual feed tray or MP tray to allow the other side of the paper to be printed on. At the back of the printer, open the faceup output tray and push down the blue tabs on the left and right hand sides as shown in the figure below. When you have finished printing, close the face up output tray to reset the two blue tabs back to their original position. Figure 160 Figure 161 This section is for HL5150D and HL5170DN. Letter or Legal size A4 size In the Advanced tab select Duplex Printing mode, check Duplex, and make sure that Use Duplex tray has been selected. Select Duplex Type and set Binding Offset if you need, and then click the OK button. The printer will print on both sides of the paper automatically. PCL driver PS driver Typically, this format is a printer command language or page description language. The printer drivers for the following operating systems are on the CDROM that we have supplied. Basic tab 1 Select the Paper Size, Multiple Page, Orientation and so on. 2 Select the Paper Source and so on. The screens on your PC will vary depending on your Operating System. If you print with this setting, the print speed may be slower depending on the print data. To make the booklet, fold the printed pages down the middle. When using the booklet printing function, please note that the paper size, orientation, source and other settings must remain unchanged for the whole document. Watermark You can place a watermarked logo or text into your documents.

When you use a bitmap file as a watermark, you can change the size of the watermark and place it anywhere you like on the page. When you use text as a watermark, you can change the font, darkness and angle settings. To reprint press and hold down the Go button until all four LEDs are lit and then release the Go button. Quick Print Setup You can turn the Quick Print Setup function ON or OFF. A small selection window appears on your computer. Sleep mode acts as though the printer was turned off. The default timeout is 5 minutes. When Intelligent Sleep Mode is selected, it is automatically adjusted to the most suitable timeout setting depending on the frequency of your printer use. While the printer is in sleep mode, all the LEDs are off, but the printer can still receive data from the computer. Receiving a print file or document automatically wakes up the printer to start printing. Pressing one of the buttons will also wake up the printer. Sleep mode can be turned off. To turn sleep mode off, go to the Advanced tab, select Device Options and then select Sleep Time. Double click the word Sleep Time in the Sleep Time screen, this will allow the Sleep Time Off function to appear, click Sleep Time Off to stop the printer going into sleep mode. The Sleep Time Off function can be hidden by double clicking the word Sleep Time in the Sleep Time screen again. We recommend that you keep Sleep mode on for power saving. Status Monitor This reports the printer's status any errors that may happen with the printer when printing. The default setting for the Status Monitor is off. If you would like to turn the status monitor on, go to the Advanced tab, select Device options and then select Status monitor. Macro For HL 5140, HL5150D and HL5170DN You can save a page of a document as a macro to the printer memory.

Moreover, you can execute the saved macro in other words, you can use the saved macro as an overlay on any document. This will save time and increase printing speed for often used information such as forms, company logos, letter head formats or invoices. If you want to prevent other people from printing your data using the Reprint function, clear the Use Reprint check box in the job spooling settings. The page protection feature allows the printer to create the full page image to be printed in memory before physically moving the paper through the printer. When the image is very complicated and the printer has to wait to process the image before printing, use this function. Time Specifies the format of the time. Density adjustment Increase or decrease the print density. Tray settings will match the installed options. 2 Paper Source Setting This feature recognizes the paper size in each paper tray. 3 Auto detection of printer options For HL5140, HL5150D and HL5170DN The Auto Detect function finds the currently installed devices and shows the available settings in the printer driver. When you click the Auto Detect button, options that are installed on the printer will be listed. You can manually add or remove options. Auto Detect

function may not be available under certain printer conditions. 1 2 3 This section is for HL5150D and HL5170DN. The screens on your PC will vary depending on your Operating System. Sleep mode acts as though the printer was turned off. When Intelligent Sleep Mode is selected, it is automatically adjusted to the most suitable timeout setting depending on the frequency of your printer use. While the printer is in sleep mode, the LED is off, but the printer can still receive data from the computer. Receiving a print file or document automatically wakes up the printer to start printing. Pressing the GO button will also wake up the printer.

We recommend that you keep Sleep mode on to save power. **Border** If you want to add a border, use this function. **Print on Both Sides** When you want to print on both sides of the paper, use this function. **Sleep Time** When the printer does not receive data for a certain period of time timeout, it enters sleep mode. We recommend that you keep Sleep mode on to save power. The administrator should set up the IP address, Gateway and Subnet with BRAdmin Professional before using this software. If the administrator then installs the printer driver and port driver using this software, the administrator can save the file to the file server or send the file by Email to users. Then, each user just clicks that file to have the printer driver, port driver, IP address, and so on, automatically copied to their PC. This section is for HL5170DN. When the printer receives data from the computer, it automatically chooses the emulation mode. This feature has been set at the factory to ON. The printer can choose from the following combinations This section is for HL5150D and HL5170DN. **Setting 1 default Setting 2 HP LaserJet HP LaserJet BRScript 3 BRScript 3 EPSON FX850 IBM ProPrinter XL** **Figure 31** The LED indications shown in the table below are used in the illustrations in this chapter. **Control panel LED is off or or LED is on or or LED is blinking** When the power switch is off or the printer is in Sleep mode, all the LEDs are off. **Figure 33 Warming up** The printer is warming up. **Figure 34 Ready to print** The printer is ready to print. **Figure 35 Receiving data** The printer is either receiving data from the computer, processing data in memory or printing the data. **Toner Drum Paper Status Toner Drum Paper Status Toner Drum Paper Status Toner Drum Paper Status** If the Status LED is on for a long time and not having printed, press the Go button to print the remaining data.

<https://www.becompta.be/emploi/bosch-wfxi2840gb-manual-0>